

6-Light Fence Tester

For safe and effective operation:

1. Insert the probe into the soil.
2. Remove hand from metal portion of probe (to avoid a shock).
3. To get a voltage reading, touch the metal clip (on the top of the tester) to the electrified fence.
4. The tester will light up according to the voltage at that location on the fence.
5. Remove tester from fence. Then grab probe by insulated portion and remove from the soil.



800-282-6631