## **PRS 200** Instructions



800-282-6631 www. premier1supplies.com



1. Looking at the inside of the PRS unit as in the picture, remove the left foam battery cover and set aside.



2. Lift the battery out of the foam pocket and set on the energizer case (as shown).

In the left pocket are 3 wires, 2 are red "+" and one is black "-".





washer, terminal, red wires, lock washer, nut (as shown). Tighten until wires are firmly held.

3. Unscrew the bolt of the red

of bolt and wires as follows: bolt.

"+" battery terminal. Remove red

tape from red "+" wires. Placement

Two 3 ft Ground Rods



4. Unscrew the bolt of the black "-" battery terminal. Placement of bolt and wires as follows: bolt. washer, terminal, black wire, lock washer, nut (as shown). Tighten until wires are firmly held.

5 ft MaxiShock



5. Place battery back into the foam pocket. The wires should be on top of the battery.

6. Insert foam lid.



7. Lift the right battery out of the foam pocket and set on the energizer case. In the right pocket are 3 wires, 1 is red "+" and 2 are black "-".



8. Unscrew the bolt from the red "+" terminal of the battery. Remove red tape from red "+" wire and bolt to the terminal, use same method as step 3.



Your PRS unit has been manufactured with a charged battery. It is possible that during the storage and shipping process, the battery may have

It is recommended that the batteries be fully charged prior to use. If needed this can be done by leaving the unit in full sun for 3 days or attaching the battery(s) overnight to a 2 amp or less battery charger.

lost some of its charge.

PRS on/off switch needs to remain in the OFF position during this initial battery charging phase. For normal fence operations the switch should remain ON.



9. Unscrew the bolt from the "-" terminal and bolt in black "-" wires. Place battery back into the foam pocket.



11. Do not shut black and red fence leads in the case.




Do not set battery on the wires, the wires should be on top of the battery.

10. Insert foam lid.



Close and secure energizer lid.

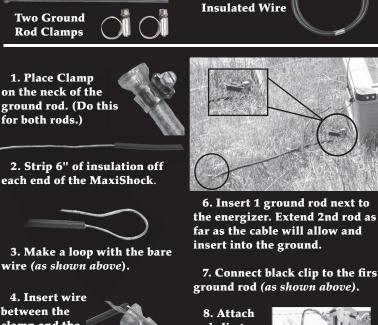

Connecting the PRS

3. Make a loop with the bare wire (as shown above).

4. Insert wire between the clamp and the ground rod.

5. Tighten the clamp so it firmly holds the wire to the rod. Repeat for the 2nd ground rod.

- 7. Connect black clip to the first ground rod (as shown above).
- red clip to the portion of the fence that is to be energized.



9. Turn on the energizer (on/ off switch between the latches on the energizer.