
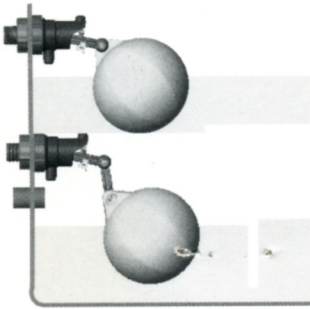


### FITTING INSTRUCTIONS

- Install valve with washer inside tank
- Attach float for desired position
- Use thread seal tape
- Flush water line before connecting

#### Warranty


We will repair OR replace product that fails due to faulty parts or manufacture for 2 years from date of purchase.

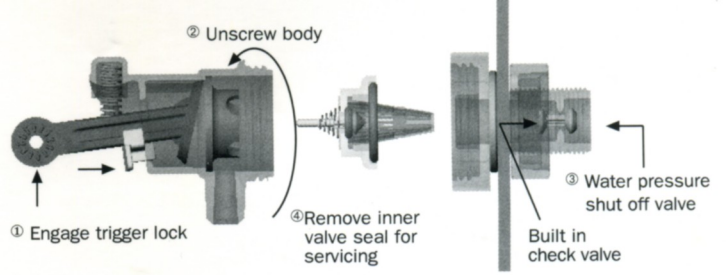

Extension arm may be used to lower water level.



Attach cord through hole in arm

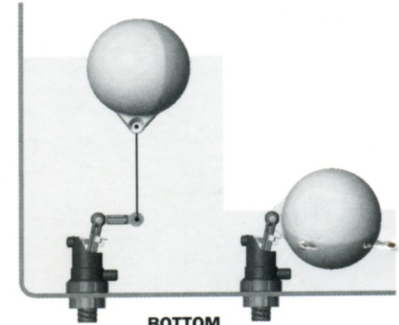

Extension arm to be used when cord is needed. Attach extension at 90° angle to arm.