

## Fitting Instructions

- Flush debris from pipelines thoroughly before fitting.
- Use thread tape on inlet thread
- Screw valve in hand tight only
- Connect cord to float and tie off so top of float is level with top of trough.

Available Sizes:  
15mm, 20mm, 25mm, 32mm  
(1/2", 3/4", 1", 1 1/4" BSP)  
(1/2", 3/4", 1", 1 1/4" NPT)

Note: For use with clean water

## Warranty


We will repair OR replace Product that fails due to faulty parts or manufacture for 2 years from date of purchase.

## MegaFlow Features

- High flow
- Compact robust construction
- 20-60mm (3/4" - 2 1/2") water level differential (increases as water pressure increases)
- Positive on/off operation
- Lock off with cord lock
- 0.3 - 10 bar (5 - 150 P.S.I.) pressure rating
- Constructed from corrosion resistant materials
- Under water installation helps avoid freezing
- Valve is less prone to stock damage

### Cord Lock

Lock valve in OFF position

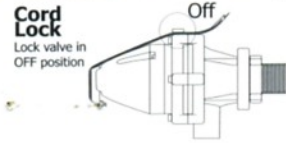

## Detach Features

- Remove and refit valve quickly and easily without turning off water supply.
- Gives quick access to valve seal for cleaning.
- Less chance of cross threading
- Allows use of Connect quick coupling.
- 1/2" and 3/4" options with long tail and backnut ideal for mounting on thin walled tanks.
- Easy Access to filter

### To remove filter for cleaning:

1. Detach valve from adapter
2. Grip here and pull.



## Detach



Patents pending EP 05256611.4 / US 11/259,359 / NZ 536133

Remove valve body from DETACH adaptor. Service valve and re-engage valve body to DETACH adaptor.

**DETACH can be disengaged/re-engaged with water supply flowing.**

NB. Ensure float is held down when re-engaging valve.