


66/70 Amp Hr. Assembly Instructions

Lay the two 33/35 amp hr batteries in lower case on IntelliShock Unit (32B, 55B and 88B). By hooking the battery's parallel (Positive to Positive and Negative to Negative) we achieve a 66/70 amp hr. battery.

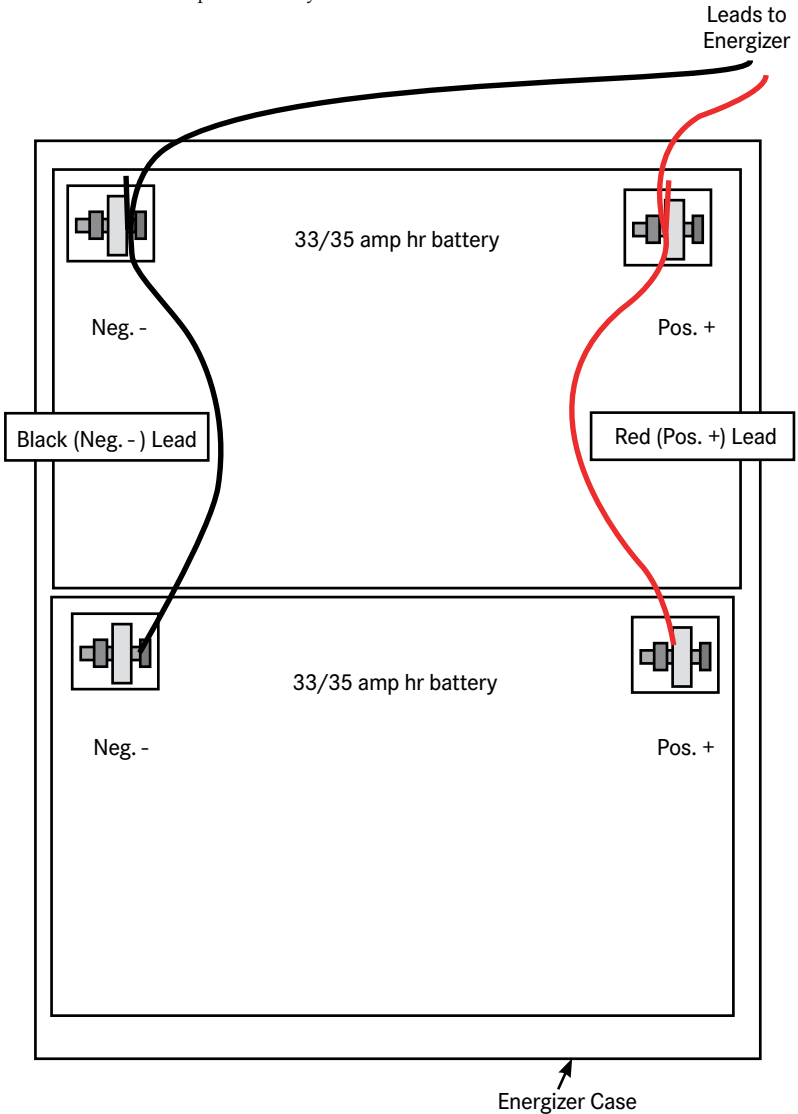

800-282-6631
www.premier1supplies.com
2031 300th St., Washington, IA 52353