


Permanent - Rope fence up to 5 strands

Click on the products and photos below to view on our website.



www.premier1supplies.com

800-282-6631 • Washington, IA

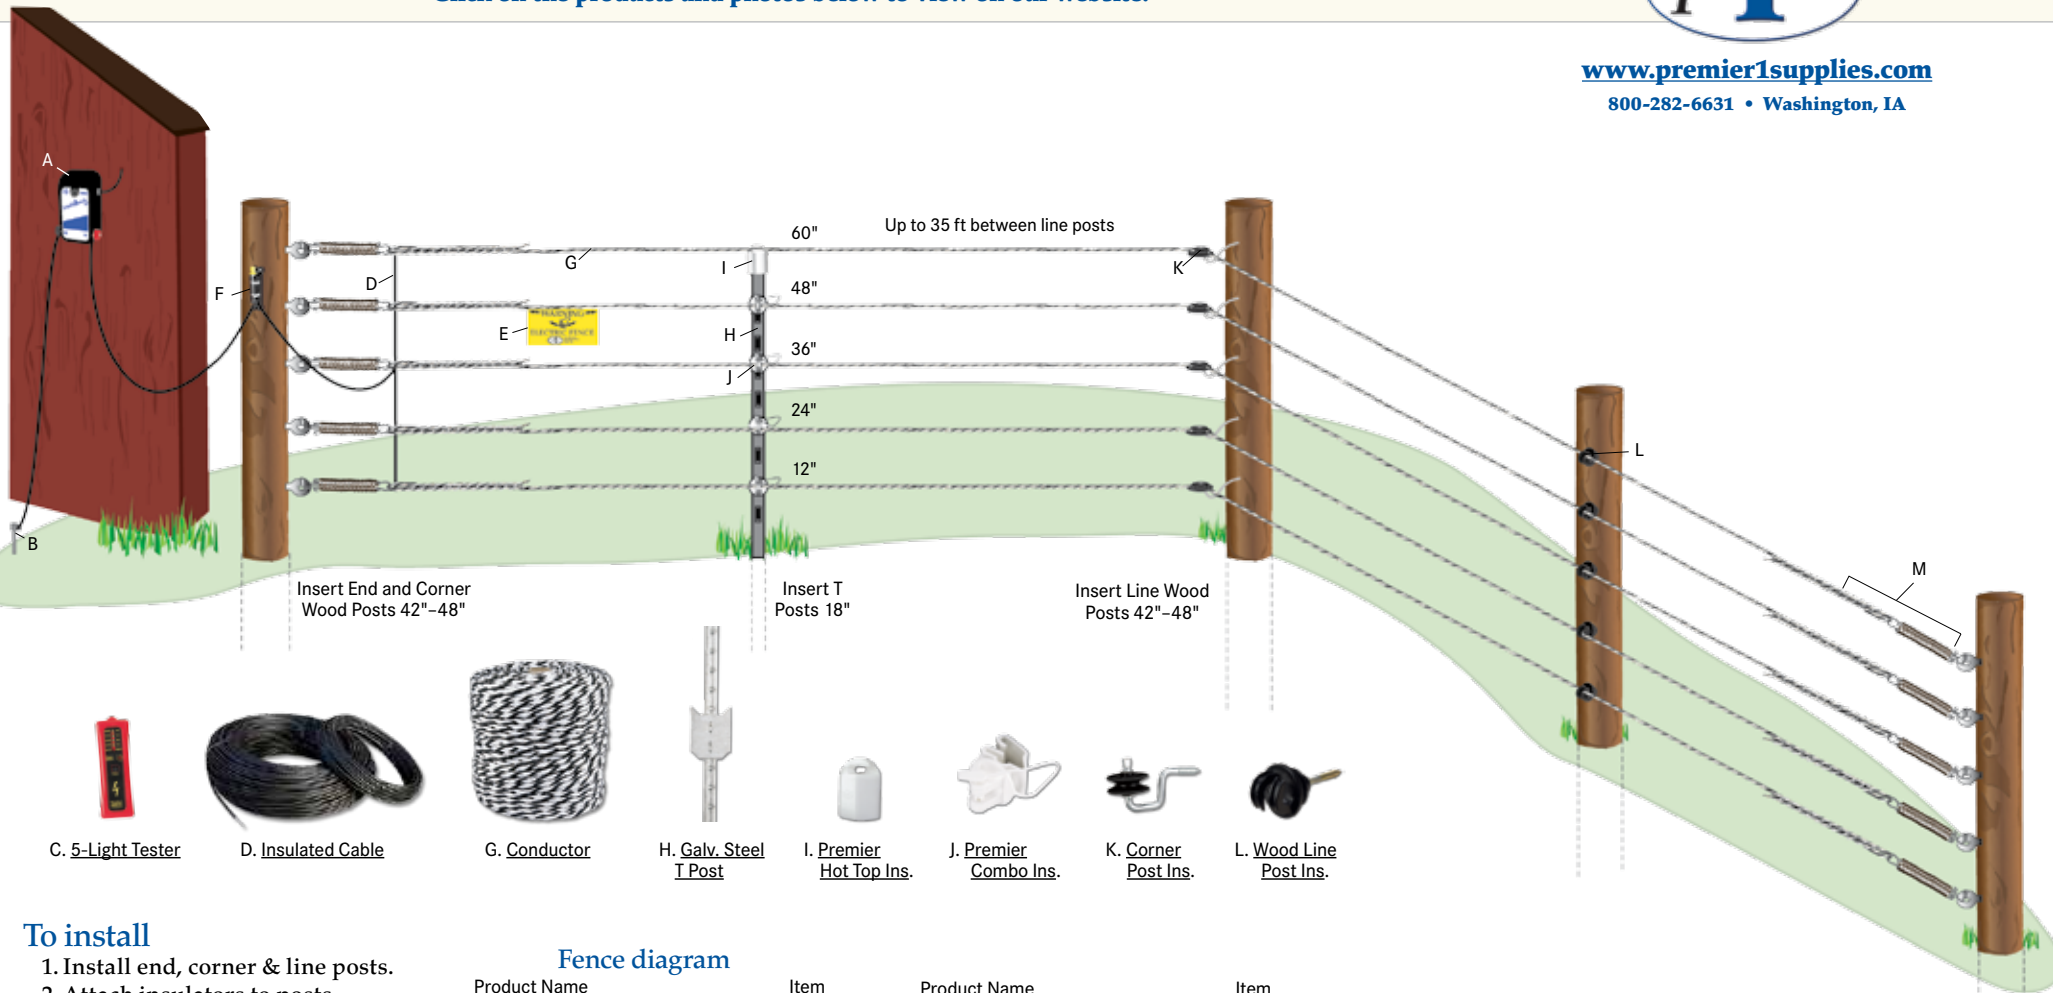

To install

1. Install end, corner & line posts.
2. Attach insulators to posts.
3. Attach rope to one end post.
4. Clip rope into insulators.
Pull until the P Spring is 50% compressed. Terminate it.
5. Connect ropes electrically at one end with an insulated wire or a Rope-to-Rope Link.
6. Install and connect the energizer. Voltage should be over 1500 volts. The fence must always be properly electrified.

Fence diagram

Product Name	Item
A. Energizers	
B. Galv. Ground Rod, 6' x 5/8" , 6 lb..	#151000
Stainless Clamp , 0.10 lb.....	#151800
C. 5-Light Tester , 0.30 lb	#200006
D. Insulated Cable	
E. Warning Sign , 0.06 lb.....	#346000
F. Cut-Out Switch , 0.32 lb.....	#333000
G. EnduraSoft 6.0, 660' , 12 lb	#256500
IntelliRope PE 6.0, 660' , 8.20 lb ...	#256900
IntelliBraid, 660' , 11.60 lb	#256710

Product Name	Item
H. Galv. Steel T Post , 7', 10.50 lb	#327800
I. Premier Hot Top Ins. , 0.20 lb	#381000
J. Premier Combo Ins. , 0.10 lb.....	#380321
K. Corner Post Ins. , 0.20 lb.....	#380900
L. Wood Line Post Ins. , 0.10 lb.....	#380712
M. P Spring Combination	
1. TuffRing II Ins. , 0.10 lb	#380705
2. P Spring , SS, 0.30 lb.....	#255010
3. RopeLink 2.6 , 0.10 lb.....	#256210

M. P Spring Combination with RopeLink

