

Premier Wire Dispenser Assembly Instructions

#402000

1. Take the arms off of the arm assembly and turn so they are on top facing outward (see diagram) and retighten.
2. Twist off the winged nuts off of the base plate.
3. Remove washer and spring.
4. Set arm assembly over the bolt.
5. Put the spring and washer back on and tighten wing nuts.



www.premier1supplies.com

800-282-6631
2031 300th St., Washington, IA 52353

