 
QuikClean Bucket Waterer #540072

 
REPLACEMENT PARTS

- #53002501 Bolt, threaded plastic А
- #53002502 Rubber Seal В
- С #54007203 Bucket #53002504 Flow Valve D
- #53002505 Valve Insert Е
- F #53002506 Diaphragm/Float
- G #54022527 Triangle Valve
- H #54007208....Bottom base
- #53002509 Plastic nut
- #53002510 Valve cover .1
- К #53002511 Handle
- #53002512 Lid L











- 2. Insert the bolt (A) into the bottom of the bucket (C). Put threads in first and twist it into place by turning it clockwise (this will keep this piece in place during other parts of assembly).
- 3. This photo shows how your waterer should appear thus far.

4. Insert valve insert (E)

into the flow valve

(D), if not already

assembled like this.

piece (rubber part

first) into the small

round hole in the base of the bucket (C).

 
Place this assembled



- 5. Set the diaphragm/ float (F) onto the base of the bucket (C). Place it so the larger diameter side is against the pail.
- 6. Insert the triangle valve (G) into the base (H). Push in with the smooth side of the valve piece facing the outside. It will "pop" when put correctly inserted.











- 9. Position the hexagon nut (I) into the recessed portion of the base (H). Hold the nut in place and begin tightening the threaded bolt (A) clockwise until firmly in place.
- 10. Flip the waterer so it rests on the base (H). Take the valve cover (J) and firmly insert it onto the elevated plastic cone on the inside of the bucket.

 - 11. Take the handle (K) and snap both pieces into the slots on the bucket (C). This will require reasonable pressure and force. There will be a definite"pop"when properly installed.
- 12. Set the waterer on level ground. Fill with water and place the lid (L) on top of the pail.

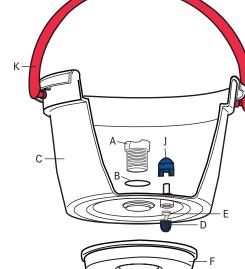





800-282-6631 premier1supplies.com © Copyright 2022, Premier1Supplies. All rights reserved.