

PRODUCT MANUAL

Premier Cordless Clipper 900c/



High powered small cordless clipper for livestock and pets

- ✓ Powerful brushless motor
- ✓ Lightweight and balanced
- ✓ 3-½ hour runtime per battery
- ✓ Compatible with "A5" detachable blades

For product support, please contact:



Premier1Supplies.com
800-282-6631

Package includes:

- Premier 900c/ Clipper
- Eagle 10 or Eagle Blocking Blade Set
- 110V Plug-in Charging Station
- 2 Lithium-ion Batteries
- 4 oz bottle of Clipping Oil
- Protective Storage Case
- Instruction Manual



Specifications	
Dimensions	7.5"L, 1.875"W, 1.75"H
Weight (with battery/blade)	1 lb
Watt	24W
Battery type	Lithium-ion Battery 7.4V
Moter	100-240V
Adapter	DC 12V/2A
Working time	About 7 hrs
Charging time	3.5 hrs
Strokes per minute	3,300
Coating of clipper housing	Rubber Coating
Material of blade	High Carbon Steel

Attention:

- Keep out of reach of children.
- Keep away from heat.
- Keep away from water. Don't use in a bathroom or somewhere damp.
- Make sure to turn off the switch while charging.



WARNING: Risk of electrical shock. Connect only to a branch circuit protected by a ground-fault circuit-interrupter (GFCI). Contact a qualified electrician if you cannot verify that the circuit is protected by a GFCI.

Before using:




- Please charge the clipper for about 5 to 6 hours prior to initial use.
- Please charge the clipper for about 5 to 6 hours if the clipper is not used for over 6 months.
- When the adapter is connected with the clipper, the power indicator will light up.

The Premier 900cl Clipper is ready for a full day (up to 7 hours using included batteries) of cord-free trimming and blocking. Each battery is rated for 3-½ hours of runtime and will recharge to 100% within 3-½ hours. The charging station can charge both the spare battery and the in-unit battery simultaneously.

Battery and blade life

- Assembled with a high capacity Lithium-ion battery.
- If not using for a long period, keep batteries recharged.
- Use high-quality high carbon steel blades. Please clean and lubricate periodically in order to ensure sharpness.

Battery Level Signal

Charging	Fully Charged	Error
		
Blue Light Blinking	Blue Light	Red Light Blinking



Charge both the spare battery and the in-unit battery at the same time. 3-½ hour recharge once it is depleted.



Each lithium-ion battery provides 3-½ hours of run-time on a single charge for day-long trimming without recharging.

After using:

Be sure the clipper is OFF

1. Make sure to clean out the hair and lubricate the blade after using by using the cleaning brush to clean the main body and blade set.
2. Use oil (2-3 drops) to lubricate the blade set.
3. Detach the blade and clean the remaining animal hair.



To remove blade set (see photo A)

1. Push in blade release to release the blade set.
2. Gently lift.

To reassemble blade set (see photo B)

- In reverse order with detach method.
1. Place the blade (align on the lever).
 2. Push blade set down firmly and "snap" into place.



Sharpening Blades, Combs & Cutters

- To reproduce the quality of the cutting edge on the clipper blades that came from the factory, a lapping machine must be used. Most other methods are, in our experience, inferior to one degree or another. In addition to producing a cutting edge that won't last very long, some methods can permanently damage the blades. The most common "culprit" is using the large high speed grinding wheels that are used to sharpen cutters and combs.
- Who uses lapping machines and who does not? Obviously, Premier does and you can ship them to us. Other firms also use systems/machines that work well.

Do's and Don'ts for shipping blades to Premier (and others)

1. Do include payment (COD, credit card or check), name, return address, daytime phone number and specie of animal for which the blades will be used. If paying by check, please include your social security number or your order will be delayed.
2. Do keep clipping blade sets as pairs in the box.
3. **Don't** allow the blades/combs/cutters to rattle around in the box.
4. Do wrap them in paper or wool felt to protect them.
5. Do clean in soapy water and cover them lightly with oil or WD40™ before shipping. Premier adds a surcharge for cleaning blades/combs/cutters that are too dirty.
6. Do ship dry blades. Blades must be thoroughly dry (no water) before shipping.
7. **Don't** use so much grease or oil that it soaks up the box.
8. Send blades to: Premier 1 Supplies, 2031 300th St, Washington, IA 52353.

Preparing the animal for clipping

- **Remove the dirt from the hair first.** If this is not done, expect accelerated blade wear and a reduction in animals clipped between blade sharpenings in exact proportion to the amount of dirt present. The benefits of dirt removal prior to clipping cannot be over-emphasized.
- **Washing the animal with soap and water removes the most dirt.** If this is not practical, use a high power vacuum or blower to remove as much dirt as possible from the hair or wool.
- **Restrain the animal.** Few animals like the sound of a clipper or the feel of vibration on their skin. When they react to either without warning, accidents can and will happen. Therefore, for the sake of you, your animal and your clipper, restrain the animal properly prior to clipping.

Repairs

Send the clipper to a qualified technician. Premier is the ultimate repair shop for repairing all clippers/shears that we sell. Call us for details at 800-282-6631.

Warranty

Defective parts and workmanship are repaired free of charge for up to 2 years on the clipper from the original date of purchase. Does not apply to obvious abuse (e.g. damage from dropping, exposure to chemicals, immersion in water), lack of maintenance and /or broken, dull or rusted blades.

Basic Troubleshooting

Situation	Inspection Point	Method
Blade set doesn't fit into the clipper	Lever of blade & moving blade does not fit well	Push the blade firmly in to place
Hair is lodged while cutting	Power electricity	Charge clipper, or change battery
Blade shakes while cutting	Blade Sharpness	Change blade set
Clipper will not charge	Adapter voltage	Change adapter
	Plug	Make sure plug fits into clipper
	Battery life	Change battery