



Directions for Use

The Incredible Egg Washer™

Manufactured by *Fall Harvest Products®*

Model #1

SKU# 87611 00001

Patent Applied For—All Rights Reserved ©2009

The Incredible Egg Washer™ is Manufactured by *Fall Harvest Products®*.

PO Box 302, Manchaug MA USA 01526-0302

Toll Free 1-866-352-6652 - Toll Free FAX 1-877-455-4647

Tel. 1-508-476-0038 - FAX 1-508-476-7703

For Replacement Parts & Information:

Email: Info@TheIncredibleEggWasher.com Web: www.TheIncredibleEggWasher.com

Patent Applied For—All Rights Reserved ©2009

The Incredible Egg Washer™

Directions for Use

1. Rinse The Incredible Egg Washer™ with hot water prior to use to remove any debris.
2. Fill egg washer with 3-gallons of 90-100 degree F. water.
3. Add Egg Wash powder per directions on egg wash detergent container.
4. Insert the egg basket with eggs properly spaced so as to have the top layer of the eggs as flat as possible.
5. Two weight discs are provided to hold the eggs in place.. Please use the disc that most closely fits the diameter of the basket at the top of the eggs in the basket. Gently lay the weight disc on the eggs. The smaller diameter disc should be used when there are just one or two layers of eggs, and the larger diameter disc should be used if the basket is more than half full of eggs. Use only one weight disc when washing eggs. Add water as necessary to be 1 or 2 inches above eggs.
6. Affix the enclosed red air hose assembly to your air compressor hose. Use only the air hose assembly furnished with the egg washer and feed it through the loop mounted on the side of the egg washer near the top. This prevents wash water from backing up into the air compressor when the compressor is shut off. **If air hose is not fed through the loop, damage may occur to your air compressor.** Attach the screw-on air chuck to the air valve at the base of The Incredible Egg Washer™ and start air compressor.
7. Set airflow with regulator on air compressor outlet, if equipped, to create a turbulent, **but not violent**, bubbling action in the egg washer. Too much air flow will cause eggs to bounce and crack. Ideal airflow is 2 c.f.m. (cubic feet of air per minute). *(Fall Harvest Products® distributes a small air compressor that is sized exactly for this application. It weighs 5 lbs., operates on house current (120 volts), and pressure is pre-set. Find dealers at www.FallHarvestProducts.com or by calling toll free to 1-866-352-6652).*
8. Cover egg washer loosely with cover to avoid splashing water. Do not snap cover down over lip. For your safety, in the event that cover is inadvertently snapped down over the lip, air pressure will **not** build up in The Incredible Egg Washer™. Vent holes have been provided near the top of the rim to vent excess air. Wash water may occasionally drip from these holes. **DO NOT BLOCK THESE HOLES!**
9. After approximately 10-15 minutes, or sooner if eggs appear clean, stop air compressor and remove air hose. Remove cover and egg basket, and let eggs drain in sink while remaining in the basket. Dump wash water and rinse out The Incredible Egg Washer™.
10. Fill with 3 gallons of 90-100 degree rinse water with no additives or chemicals in the water. Put egg basket with eggs back into The Incredible Egg Washer™ in the rinse water. Cover egg washer. Affix air chuck to the valve stem and start air compressor. Run for at least 3 minutes to allow eggs to get a good rinse with the turbulent water. Shut down as in Step #9.
11. Remove the egg basket from rinse water, remove weight disc and run warm tap water over eggs while still in basket to complete a final rinse. Remove and inspect eggs. Any eggs that still have debris on them may be hand washed with the egg brush or egg scrubbing pad under running warm water and loosened debris will be easily removed.
12. Dry eggs on towels or air dry in basket and immediately store eggs under refrigeration. Optionally, you may now coat eggs with egg oil (food grade mineral oil) to give eggs luster, replace the bloom and seal the pores.
13. Rinse and clean The Incredible Egg Washer™ with hot water, being sure to remove any heavy debris that may have sank to the bottom during the wash or rinse. Towel dry, being careful not to disturb the delicate air tube at the bottom. Rinse the egg basket, weight discs, and egg brush. After drying these items, put them inside and cover The Incredible Egg Washer™ so that it will be clean for next use. If the air chuck assembly can be removed from the air hose, then remove it and store it in a plastic zip lock bag or wrap it in a paper towel and store it in the egg washer so you don't lose it. Please store The Incredible Egg Washer™ away from children. It is not a toy and must remain clean for next use.



CAUTION: As with any 5-gallon pail, use caution around children. Children, especially small children, may drown by tipping top-heavy into the pail and not be able to get righted without assistance! Never use The Incredible Egg Washer™ out of your presence for safety's sake!

Enjoy your new egg washer!