 
## FEED-O-MATIC


Automatic treadle feeder 5kg, 8kg, 12kg, 20kg.












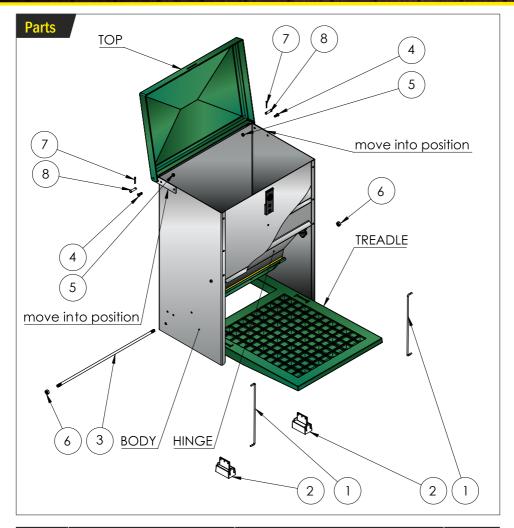



ltem no.	Part number	Description	Qty.
1	Arm-c	Arm treadle/hinge	2
2	Hinge-tr-pl-c	Connector treadle	2
3	Shaft-bot-c	Shaft (M6)	1
4	Screw-m4	M4-Screw	2
5	M4-nut	M4-Nut	2
6	M6-nut	M6-Nut	2
7	Split-c	Split pin	2
8	Pin-c	Hinge pin	2

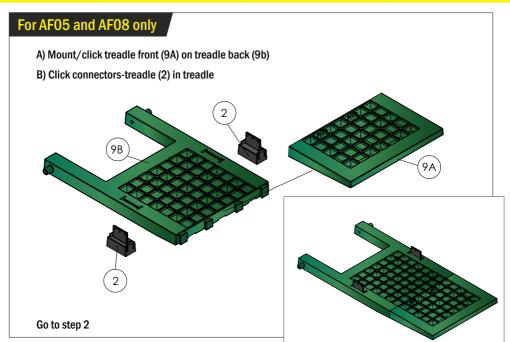


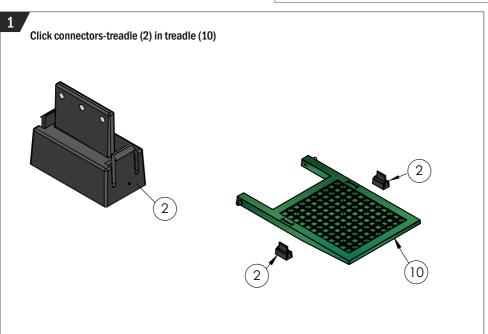

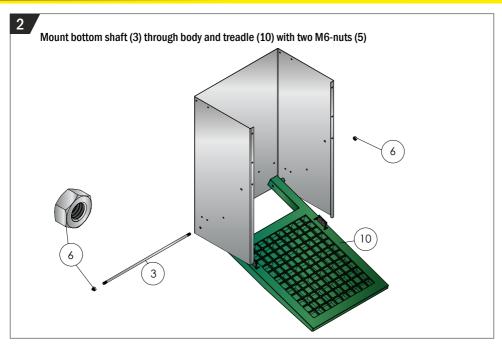

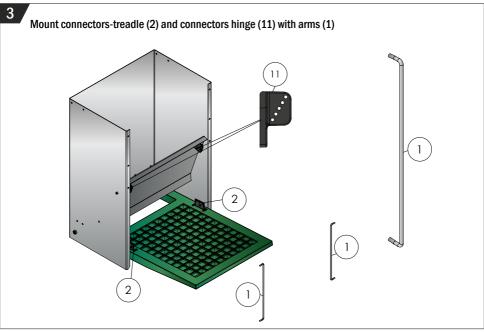

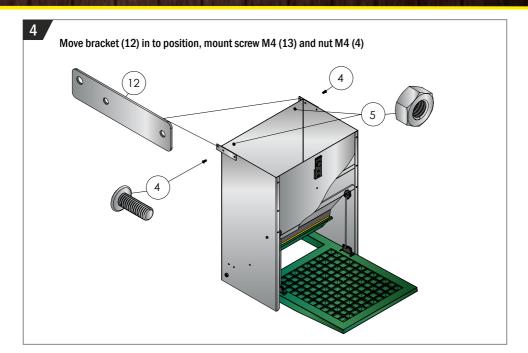

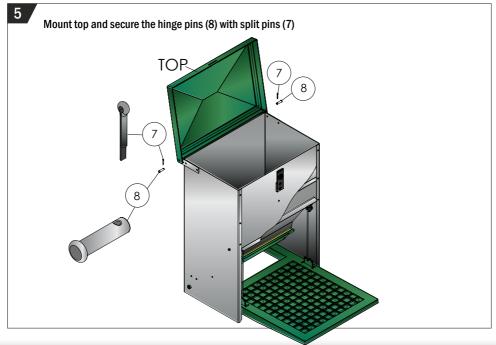

## Adjustable minimum animal weight settings

The feeder can be operated by all poultry, the access to the food can be adjusted on basis of the weight of the animals. Each model of the Feedomatic has five different settings.

For animals of for example 500 grams, you choose bottom setting A and top setting 2 when you have a 5kg. or a 8kg. model of the Feedomatic. In case you have a 12kg. or a 20kg. model of the Feedomatic, you choose bottom setting A and top setting 1.

Model AF05F/AF08F						
	Bottom setting					
		Α	В	С		
Top setting	1	350 GR	do not use			
	2	400 GR	do not use	nse		
	3	750 GR	do not use	do not use		
Ğ	4	do not use	1000 GR	б		
	5	do not use	1400 GR			

Model AF12F/AF20F						
Bottom setting						
٠.		Α	В	С		
	1	450 GR	do not use			
ting	2	600 GR	do not use	se		
Top setting	3	1200 GR	do not use	do not use		
힏	4	do not use	1600 GR	ор		
	5	do not use	2500 GR			





## Training your flock how to use the treadle feeder

Some animals need to get used to their new treadle feeder. Training them only takes approximately two or three days. Put a stone or a weight on the treadle to show the animal where the food is. Sometimes it might be helpful to keep the stone for a day or two on the treadle, this way the animals will discover themselves where the food is.





