

Kubic Waterer Troubleshooting

530017, 530021, 530026



1. Kubic water tank.



5. Float housing inside the bottom of the water tank.



2. Water tank with the **Flow Valve** inserted correctly.



3. This is how the **float** should be placed into the float housing.




6. Float housing pressed down into the water tank.

This step is usually missed and will result in water inside the trough, but not much.



4. Float inside the float housing.

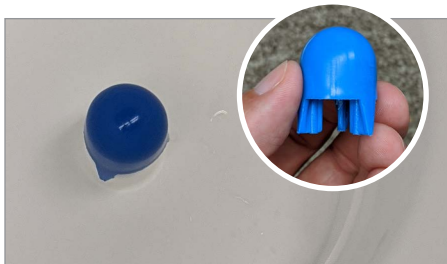

7. **Valve Cover** installed inside the water tank.

TIPS: If the water is overflowing:

1. Take a tooth pick and clean out the valve
2. The float could be installed upside down
3. The flow valve was installed upside down



www.premier1supplies.com