Features

- Improved materials and designs.
- Snap connections are easier and quicker to use than metal or nylon buckle.
- Adjustable—fits even the largest rams.
- Crayons easily changed. See on back.


Fitting Instructions:


- 1. Identify the straps.
 - a) The shoulder straps are the straps with male buckles only.
 - b) The girth strap is the strap with metal rings and buckles.
- 2. Fasten the girth strap first. With the crayon holder in position between the ram's front legs, bring the girth strap with the male buckle (A) over the back of the ram and snap it into the female buckle (A). Adjust strap to a tight fit.

3. Fasten the shoulder straps next. Pull shoulder strap (B) up one side of the ram's neck, cross it diagonally over its shoulder and buckle into the female buckle (B). Cross the second strap (C) in the same manner.

The two shoulder straps should cross on top of the ram's shoulders and be adjusted so that the crayon holder lies securely and centrally between the ram's front legs.

4. The harness may need to be readjusted after the first 1 - 2 days to compensate for settling in. Look at your ram every day to see if an adjustment is needed or if a new crayon should be installed.

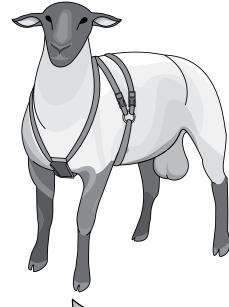

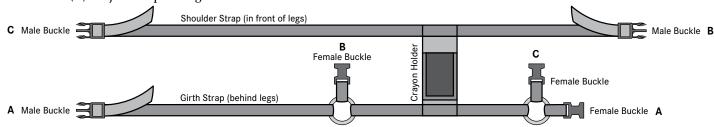

Marking Crayon Insertion Instructions



1. If using metal cotter pin, remove from the packaging. The plastic pins are provided loose.



2. Take the plastic cap off (protects crayon during transport). Pull at side and push through top as shown.



3. Slide the crayon into the harness by inserting the narrow end first.



4. Line up the holes in the harness with the holes in the crayon.



5a. Metal Cotter Pin—Take the metal cotter pin and push all the way through the middle holes of the harness.



5b. Once the cotter pin is pushed through all the way bend back the ends flush with the crayon.



800-282-6631 premier1supplies.com

©Copyright 2016, Premier1Supplies All rights reserved.