

# Galvanized Cone Feeders




#540055, 540056, 540067

## Attaching the hinge

1. Insert hinge into slot at base of trough.
2. Insert screw through hinge into trough.
3. Secure hinge and screw via wingnut.

## Attaching cone to base

4. Position cone base into two of the adjustment hinges. Lip of the cone should fit into their cutouts.
5. Twist the cone until the seam lines up with the empty hinge. Press into the base of the cone with your thumbs, while pushing on the side of the trough with your fingers. The seam will flex inward to catch under the hinge.
6. Adjust the rest of the feeder base to the desired height.

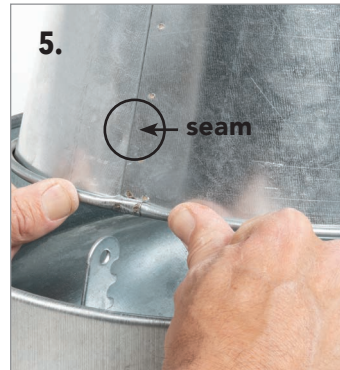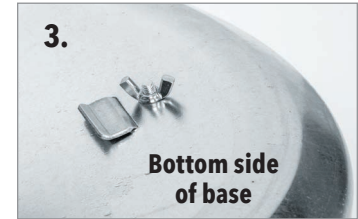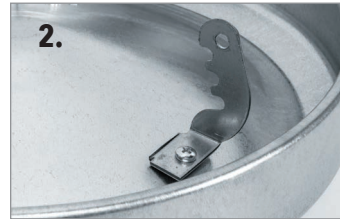

800-282-6631 | [www.premier1supplies.com](http://www.premier1supplies.com)

© Copyright 2022, Premier1Supplies. All rights reserved.