

# Kubic Waterer Troubleshooting

530017, 530021, 530026



1. Kubic water tank.



5. Float housing inside the bottom of the water tank.



2. Water tank with the **Flow Valve** inserted correctly.



3. This is how the **float** should be placed into the float housing.



6. Float housing pressed down into the water tank.  
**This step is usually missed and will result in water inside the trough, but not much.**



4. Float inside the float housing.



7. **Valve Cover** installed inside the water tank.

## TIPS: If the water is overflowing:

1. Take a tooth pick and clean out the valve
2. The float could be installed upside down
3. The flow valve was installed upside down



[www.premier1supplies.com](http://www.premier1supplies.com)