

Cross Your Heart Ram Harness

Fitting Instructions:

Those who have used the other versions of ram harnesses may recall that the front straps (around the ram's neck) were attached directly to the back strap.

Our harness fitting is slightly different:


1. Tip the ram on his rump.
2. Place harness on the ram's brisket.
3. Run the back (girth) strap up behind the front legs and around the ram's chest and buckle it directly to itself. When fitted, it will form a continuous loop around the ram just behind the shoulders and front legs. Do not tighten the back strap at this time.
4. Adjust the brass fixture so it's centered on the ram's back.
5. Bring neck strap over ram's shoulder, thread it through brass fixture and bring tie down the opposite side of the ram's neck. Snap in place.
6. Make sure the brass fixture is centered on the ram's back to assure an even pull on both sides of the harness.
7. Tightening the straps: lift buckle so it is straight up and down, then pull the strap. Placing the buckle in this position releases the tension and

allows the strap to move. When the buckle is lying flat the tension keeps the strap in place.

- a. Tighten girth strap to a snug fit on the ram. *Note:* Do not tighten the neck strap first. This will pull the girth strap forward, causing it to rub the back of the ram's forelegs.
- b. Tighten neck strap to a snug fit.



Neck Strap - passes through single loop of brass fixture

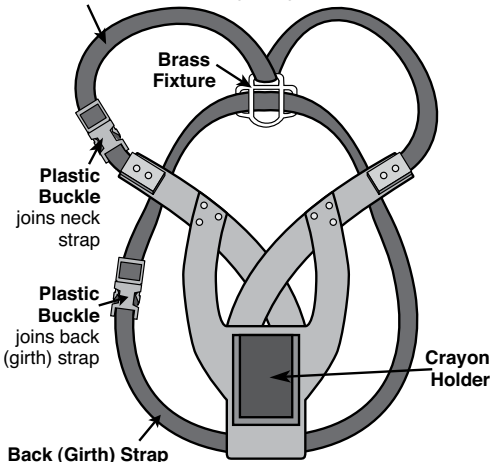

Back (Girth) Strap makes a continuous loop to the other side, passing through double loop of brass fixture on top of ram's shoulders

Features

- Unique design contour—fits the ram's brisket...reducing chafing even if newly shorn.
- Inhibits slide...reducing chance of injury.
- Extra soft nylon straps.
- Crayons easily changed.


Marking Crayon Insertion Instructions



1. Marking crayon in plastic crayon protector.




2. Cut the label in the middle to reveal the metal cotter pin. The plastic pins are provided loose.

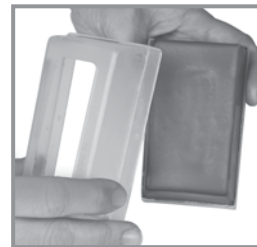

3. Turn holder back over and take the plastic cap off (protects crayon during transport).



4. Slide the crayon into the harness by inserting the narrow end first.



4. Metal Cotter Pin - Take the cotter pin and push all the way through the middle holes of the harness. Once the cotter pin is pushed through all the way bend back the ends flush with the crayon.



5. Plastic Pins (optional) - Use instead of the cotter pin. Push pins in holes on each side of harness.



800-282-6631

www.premier1supplies.com

Washington, IA