Deluxe Marking Harness

#501020

Features
- Wide, soft nylon straps—distributes pressure more evenly over the ram's body.
- Padding at the arms and brisket.
- Large buckles and loops—harness connection and stress points are reinforced. Gloved hands can manipulate the large buckles.
- Crayons easily changed. See reverse side.

Fitting Instructions:
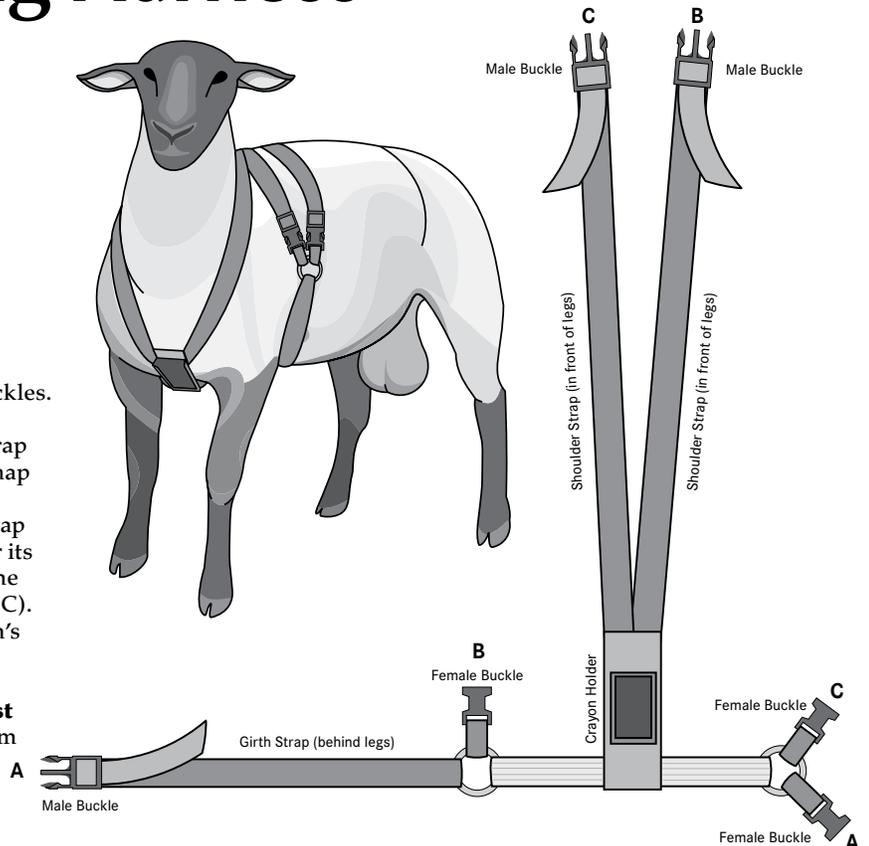1. **Identify the straps.**
   a) The shoulder straps have male buckles only.
   b) The girth strap is the strap with metal rings and buckles.
2. **Fasten the girth strap first**. With the crayon holder in position between the ram's front legs, bring the girth strap with the male buckle (A) over the back of the ram and snap it into the female buckle (A). Adjust strap to a tight fit.
3. **Fasten the shoulder straps next.** Pull one shoulder strap (B) up the side of the ram's neck, cross it diagonally over its shoulder and buckle it to the female connection (B) on the opposite side of the girth strap. Do the same for buckle (C).
   The two shoulder straps should cross on top of the ram's shoulders and be adjusted so that the crayon holder lies securely and centrally between the ram's front legs.
4. **The harness may need to be readjusted after the first 1 - 2 days** to compensate for settling in. Look at your ram every day to see if an adjustment is needed or if a new crayon should be installed.

C — Male Buckle
B — Male Buckle

Shoulder Strap (in front of legs)
Shoulder Strap (in front of legs)

B — Female Buckle

Crayon Holder

A — Male Buckle

Girth Strap (behind legs)

Female Buckle — C
Female Buckle — A

Marking Crayon Insertion Instructions

1. If using metal cotter pin, remove from the packaging. The plastic pins are provided loose.

2. Take the plastic cap off (protects crayon during transport). Pull at side and push through top as shown.

3. Slide the crayon into the harness by inserting the narrow end first.

4. Line up the holes in the harness with the holes in the crayon.

5a. Metal Cotter Pin—Take the metal cotter pin and push all the way through the middle holes of the harness.

5b. Once the cotter pin is pushed through all the way bend back the ends flush with the crayon.

PREMIER 1

800-282-6631
premier1supplies.com