


# Semi-Permanent Rope Fence - up to 5 strands

To view on our website – Click on the links & video below.



[www.premier1supplies.com](http://www.premier1supplies.com)  
800-282-6631

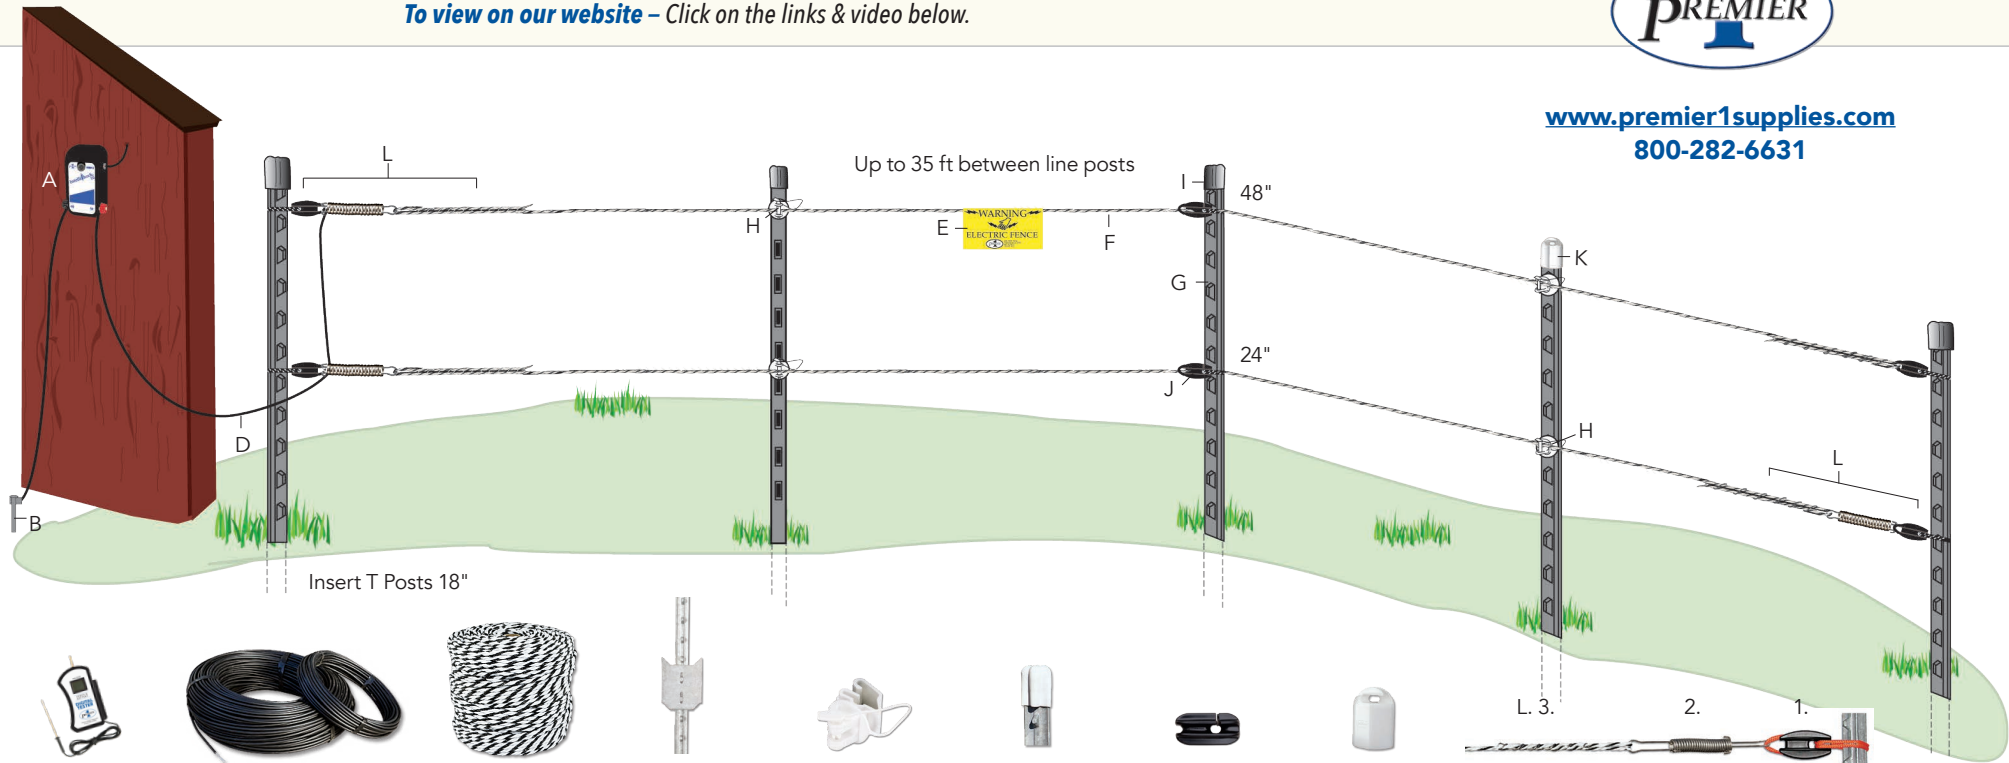

C. Fence & Battery Digital Tester

D. Insulated Cable

F. Conductor

G. Steel T Post

H. Premier Combo Insulator

I. T Post Safety Cap

J. Notched PI 21n Insulator

K. Premier Hot Top Insulator

L. 1. PI 21 Terminal Insulator  
2. P Spring  
3. RopeLink 2.6

## Fence diagram

Product Name	Item
A. Energizers	
B. Galvanized Rod, 6' x 5/8"	#151000
Galvanized Rod, 3' x 1/2"	#151200
Stainless Clamp	#151800
C. Fence & Battery Digital Tester	#200010
D. Insulated Cable	
E. Warning Sign	#346000
F. IntelliRope PE 4.5, 660'	#245100
IntelliRope PE 4.5, 1320'	#245200
IntelliRope PE 6.0, 660'	#256900
IntelliRope PE 6.0, 1320'	#256910

Product Name	Item
G. Galvanized Steel T Post, 6'	#327600
H. Premier Combo Insulator	#380321
I. T Post Safety Cap	#381010
J. PI 21n Notched Insulator	#369200
K. Premier Hot Top	#381000
L. P Spring Combination	
1. PI 21 Terminal Insulator	#369100
2. P Spring, stainless steel	#255010
3. RopeLink 2.6	#256210

### To install

**Tools:** Driver for wood and steel posts, hammer, screwdriver, cutter for rope and wire, battery drill and our driver to install insulators on wood posts.

**Time:** About 600 ft in 3 hours after end, corner and line posts are installed.

**Skill:** No special skills. Set steel end and corner posts 20-35 ft apart. If using more than 2 strands, wood and corners are advised 42" to 48" deep in firm soil.