


Semi-Permanent Multi-Rope

To view on our website – Click on the links & video below.

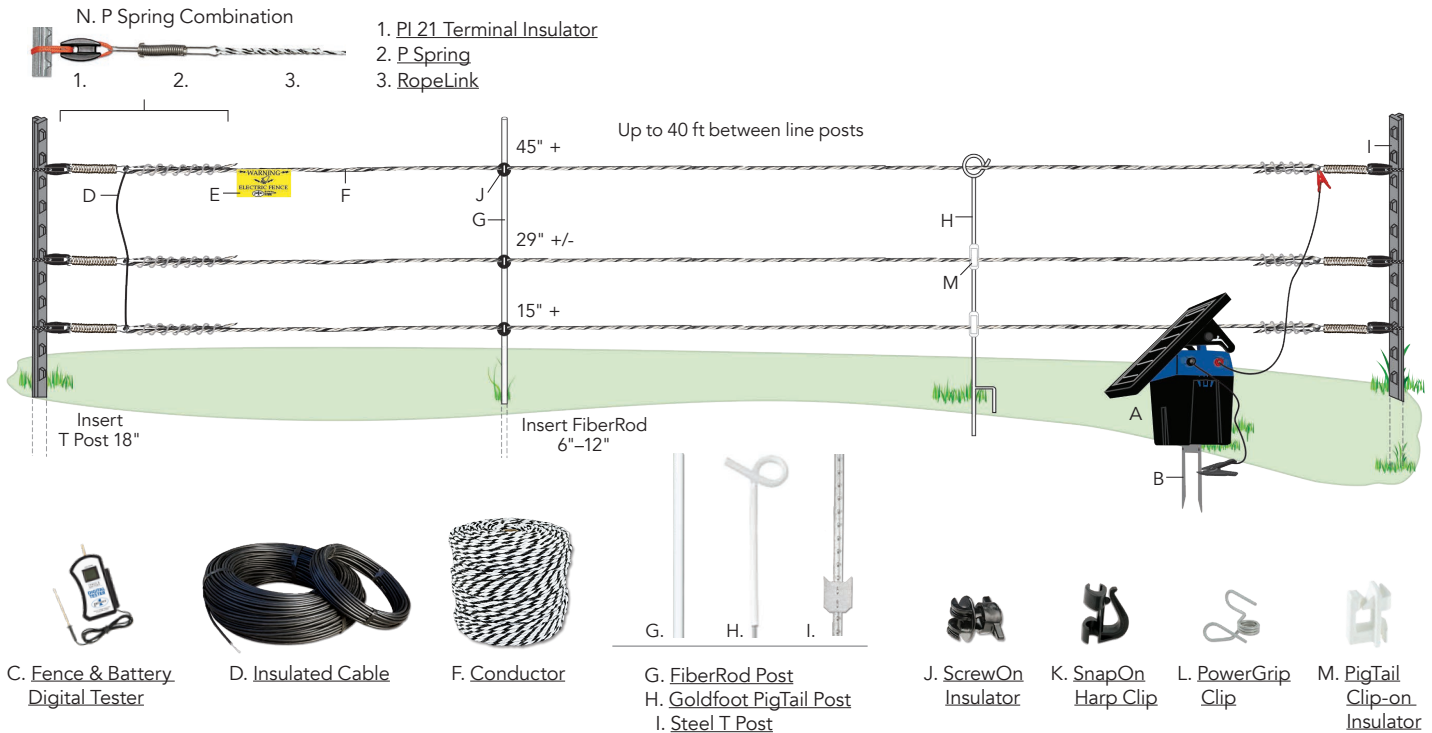

www.premier1supplies.com
800-282-6631



To install

Tools: Cutters to cut conductors; hand or power drivers to drive in steel or small wood posts; hammer to install nail-on insulators; battery drill with our power driver to rapidly insert screw-in insulators.

Time: Installing end and line posts takes the majority (75%) of the time. About 1000 ft in 2 hours in easy conditions.

Skill: Simple, straightforward.

Fence diagram

Product Name	Item
A. Energizers	
B. Ground Rod, 6' x 5/8"	#151000
Stainless Clamp	#151800
C. Fence & Battery Digital Tester	#200010
D. Insulated Cable	
E. Warning Sign	#346000
F. IntelliRope PE 6.0, 660'	#256900
IntelliRope PE 4.5, 660'	#245100
G. FiberRod, 3/8" x 4'	#321841
H. Goldfoot PigTail Post, 33"	#320600

Product Name	Item
I. Galvanized Steel T Post, 6'	#327600
J. ScrewOn Insulator	#325400
K. SnapOn Harp Clip	#325310
L. PowerGrip Clip	#325000
M. PigTail Clip-on Insulator	#380901
N. P Spring Combination	
1. PI 21 Terminal Insulator	#369100
2. P Spring	#255010
3. RopeLink 2.6	#256210
RopeLink 2.45	#256220