


2D Anti-Deer Fence

To view on our website – Click on the links & video below.

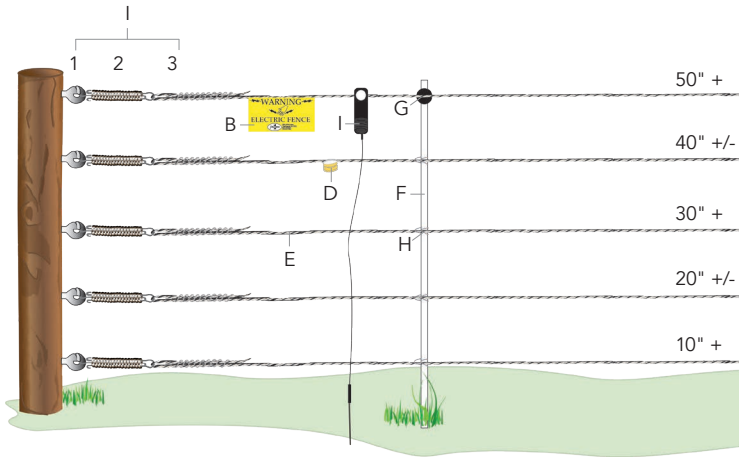

C. Fence & Battery Digital Tester



D. Scent Cap Apple Scent



E. Conductor



F. FiberRod Post



G. ScrewOn Insulator



H. PowerGrip Clip



J. Live Fence Indicator

To install 2-Strand

Drive posts. Attach insulators/clips. Insert and tension rope and/or tape. Attach scent caps and bait. Electrify and check voltage (should be above 3500).

To install 5-Strand

Drive posts. Attach insulators/clips. Insert and tension conductors (rope and/or tape). Keep strands low to stop deer crawling under them. Place one strand at nose height of a walking deer. Attach scent caps and bait. Electrify and check voltage (should be above 3500).

Fence diagram

Product Name	Item
A. Energizers	
B. Warning Sign	#346000
C. Fence & Battery Digital Tester	#200010
D. Scent Cap	#256300
Apple Scent, 4 oz	#256404
E. EnduraSoft 6.0, 660'	#256500
IntelliRope PE 6.0, 660'	#256900
F. FiberRod Post, 5'	#321851
G. ScrewOn Insulator	#325400
H. PowerGrip Clip	#325000
I. P Spring Combination	
1. TuffRing II Insulator	#380705
2. P Spring, SS	#255010
3. RopeLink 2.6	#256210
J. Live Fence Indicator	#133515



www.premier1supplies.com
800-282-6631