

PREMIER Tags


Inserting 2Xte, 2X, 5X and Button Tags



Fitting Instructions:

1. The male and female tags will come to you attached, you will need to tear them apart!
2. Place the flag of the female tag under the spring finger. The printed side of the female tag used will be against the jaw of the applicator. Slide the male tag over the metal pin. **NOTE: Be sure to push it all the way onto the pin.** The printed side of the male tag will be against the jaw of the applicator.
3. Place the ear between the jaws of the applicator. Make sure the tag is correctly placed as shown (above right).
4. While gripping the ear quickly and firmly, squeeze the handles together until the male tag is inserted through the ear and through the female side of the tag.

Inserting 2Xte, 2X and 5X Tags

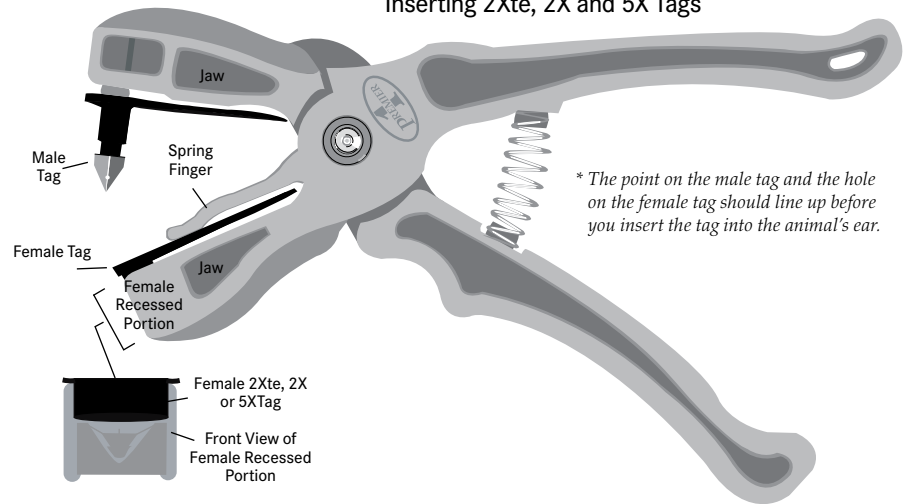


Tag placement is critical to success!


Tags, especially tags for sheep, must be installed no more than 2 inches from the skull and near the center of the ear.

The opposite extreme (installing too far from the skull) will result in more lost tags as the tissue on the tip of the ear is tender and tears easily.

Be careful to avoid the large vein (shown at right).

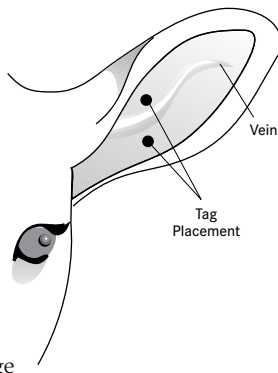

Inserting Button Tags

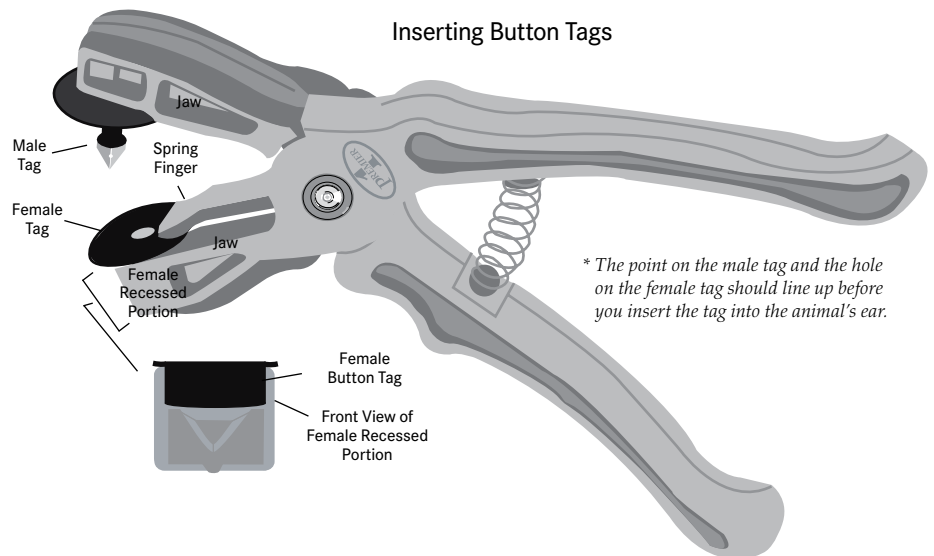

Premier Tip: Inserting Tags in Cold Weather

Plastic tags (all brands) are much easier to install if they are warm. Why? As the temperature drops below freezing plastic becomes less flexible (more stiff) and forcing the male point of a tag through the female takes many more lbs. of pressure (because the female must expand).

So if you care about your hands it's a good idea to keep the tags above freezing in very cold weather. It takes very little to do this. One method is to simply store them while tagging in a small bucket, cardboard box or tool box with a lid alongside a sealed pop bottle full of warm water. The warm water will keep both the air and the tags warmer in the container.



800-282-6631

www.premier1supplies.com

Washington, IA