



# "Guard" Strands Installation Instructions

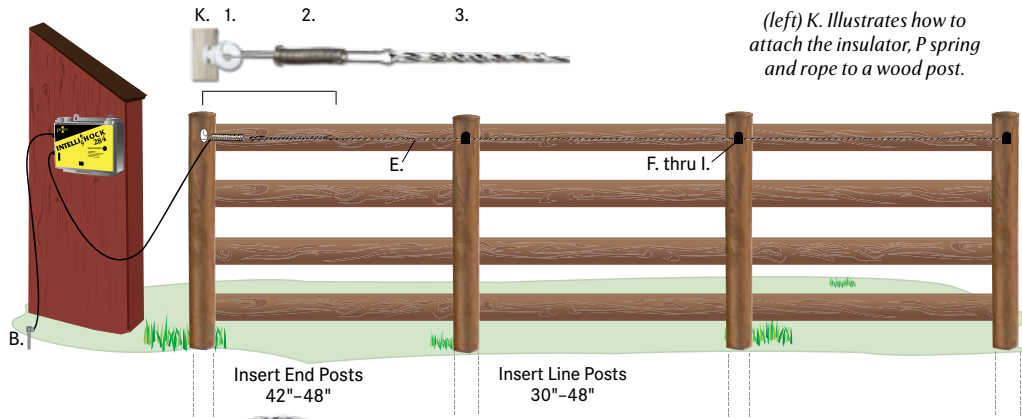

(left) K. Illustrates how to attach the insulator, P spring and rope to a wood post.

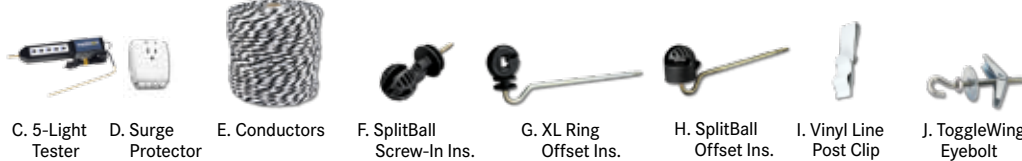

## Fence diagram

- A. Battery or Plug-in Energizers
- B. Ground Rod, 6' x 5/8" #151000
- Stainless Clamp #151800
- C. 6-Light Tester #134100
- D. Surge Protector #156500
- E. EnduraSoft 6.0, 660' #256500
- IntelliRope PE 6.0, 660' #256900

- IntelliRope PE 4.5, 660' #245100
- IntelliBraid, 660' #256710
- IntelliTape, 660' #257020
- IntelliTwine, 660' #253500
- F. SplitBall Screw-In Ins. #380600
- G. XL Ring Offset Ins. #390500
- H. SplitBall Offset Ins. #390300
- I. Upper Vinyl Line Post Clip #392005

- J. ToggleWing Eyebolt #392100
- K. P Spring Combination
- 1. TuffRing II Ins. #380705
- 2. SS P Spring #255010
- 3. RopeLink 2.0 #256210

## Items not shown

- Pigtail Offset, nail in #391600
- Lower Vinyl Post Clip #392004



800-282-6631

[www.premier1supplies.com](http://www.premier1supplies.com)

Washington, IA

#111120  
02/2011