

2D Anti-Deer Fence

Click on the products and photos at right to view on our website.


To install 2-Strand

Drive posts. Attach insulators/clips. Insert and tension rope and/or tape. Attach scent caps. Bait caps. Electrify. Check voltage (should be above 3000).

To install 5-Strand

Drive posts. Attach insulators. Insert and tension rope. Keep strands low to stop deer crawling under them. Place one strand at nose height of a walking deer. Attach scent caps.

Use a wide-impedance energizer instead of a low-impedance unit. Voltage should be 3500 and above.

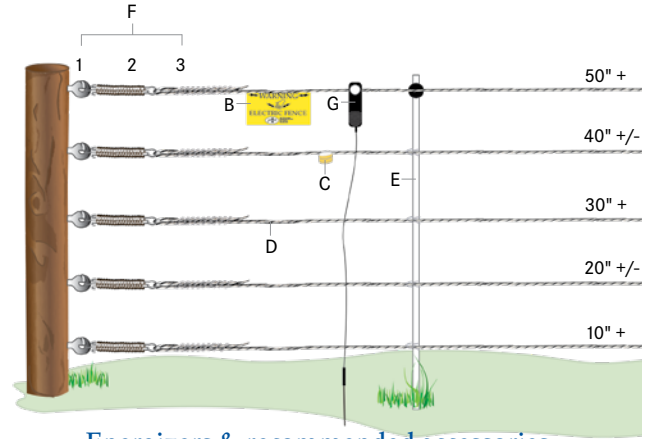

Energizers & recommended accessories

| Product Name | Item |
|--|---------|
| A. Energizers | |
| B. Warning Sign , 0.06 lb | #346000 |
| C. Scent Cap , 0.01 lb..... | #256300 |
| Apple Scent , 4 oz, 0.30 lb | |
|#256404 | |
| D. EnduraSoft 6.0 , 660', 12 lb..... | #256500 |
| IntelliRope PE 6.0 , 660', 8.20 lb | |
|#256900 | |
| E. FiberRod Post , 5', 0.47 lb..... | #321851 |
| F. P Spring Combination | |
| 1. TuffRing II Insulator , 0.10 lb | |
|#380705 | |
| 2. P Spring , SS, 0.30 lb..... | |
|#255010 | |
| 3. RopeLink 2.6 , 0.10 lb..... | |
|#256210 | |
| G. Live Fence Indicator , 0.25 lb | #133515 |



www.premier1supplies.com

800-282-6631 • Washington, IA