



Electrified Gates

#111119

Installing on wood posts

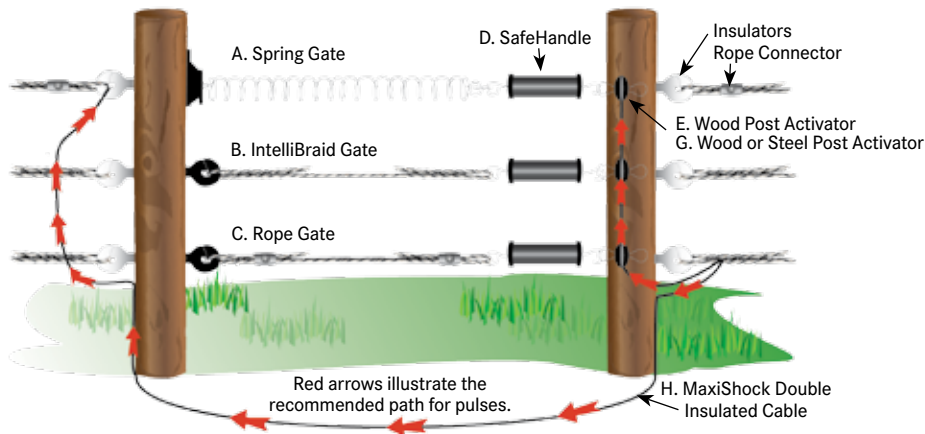

Installing on t posts

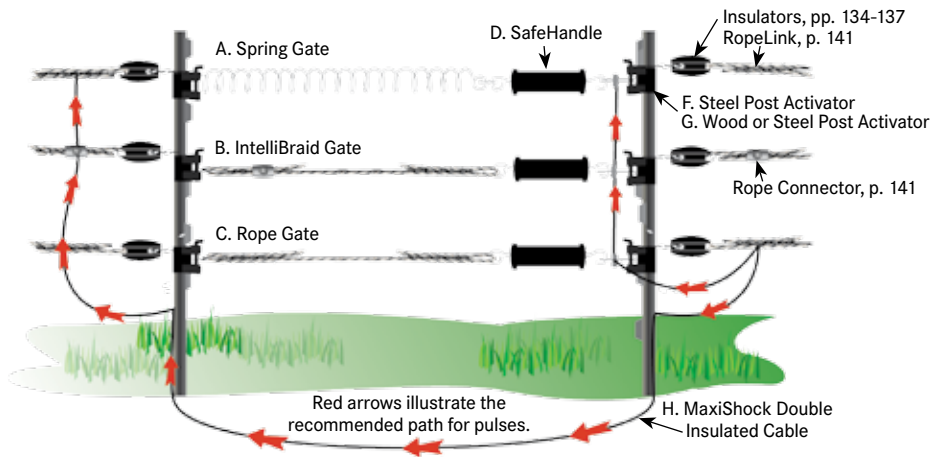

Don't rely on the gate to carry the power to the next fence. Instead, run insulated wire under gate openings to electrically connect fences on each side.

- **For permanent fences** use PI34 double-insulated wire buried carefully.
- **For temporary fences**, lay MaxiShock insulated cable just under the soil surface.



www.premier1supplies.com
800-282-6631

© Copyright 2016, Premier1Supplies. All rights reserved.