

2D Anti-Deer Fence

Click on the products and photos at right to view on our website.

To install 2-Strand

Drive posts. Attach insulators/clips. Insert and tension rope and/or tape. Attach scent caps. Bait caps. Electrify. Check voltage (should be above 3000).

To install 5-Strand


Drive posts. Attach insulators. Insert and tension rope. Keep strands low to stop deer crawling under them. Place one strand at nose height of a walking deer. Attach scent caps.

Use a wide-impedance energizer instead of a low-impedance unit. Voltage should be 3500 and above.



www.premier1supplies.com

800-282-6631 • Washington, IA

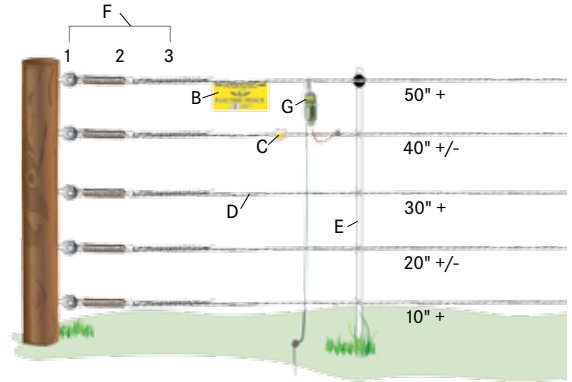

Energizers & recommended accessories

Product Name	Item
A. Battery, Plug-in or Solar Energizers	
B. Warning Sign , 0.06 lb	#346000
C. Scent Cap , 0.01 lb.....	#256300
Apple Scent , 4 oz, 0.30 lb.....	#256404
D. EnduraSoft 6.0 , 660', 12 lb.....	#256500
IntelliRope PE 6.0 , 660', 8.20 lb	#256900
E. FiberRod Post, 5' , 0.47 lb.....	#321851
F. P Spring Combination	
1. TuffRing II Insulator , 0.10 lb.....	#380705
2. P Spring, SS , 0.30 lb.....	#255010
3. RopeLink 2.6 , 0.10 lb.....	#256210
G. BlitzLight , 0.35 lb.....	#132300