


# Poultry Crate #540202




[www.premier1supplies.com](http://www.premier1supplies.com)

800-282-6631


© Copyright 2016, Premier1Supplies.  
All rights reserved.

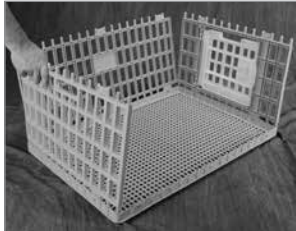

1. Insert side panels into crate's base as shown. Match curve of side panels to curve of base.

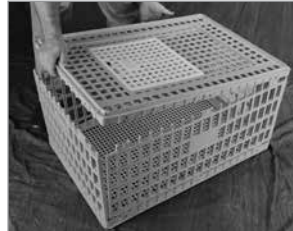

2. Place top panel over side panels. Lining up pegs with holes.

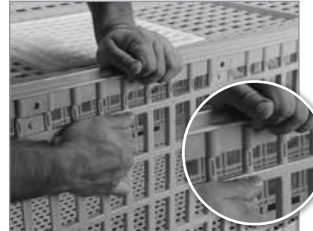


3. Press panels together. Should be a "snap" when they are connected.



4. A mallet may be needed to force stubborn peg and hole connections.



5. Make sure pegs and holes are connected. Close-up of a connected panel.

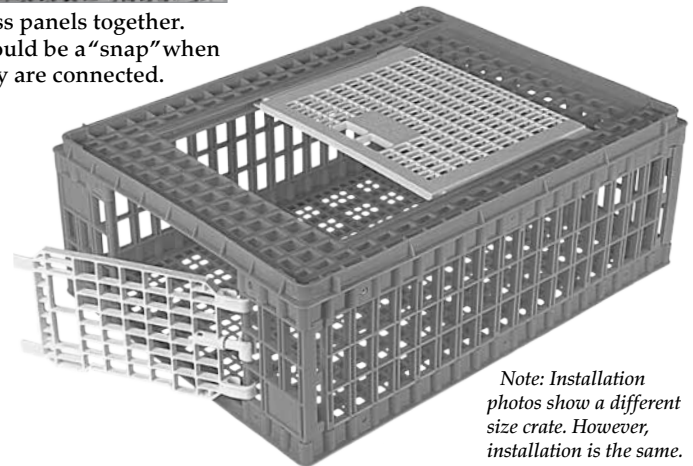

*Note: Installation photos show a different size crate. However, installation is the same.*