


## DIY Solar Kit – Quick Start


Premier1Supplies.com | 800-282-6631 ©Copyright 2023, Premier1Supplies. All rights reserved.






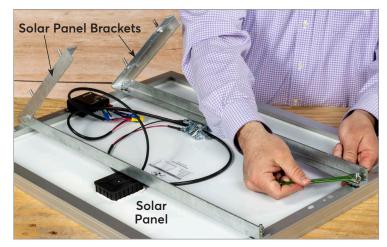


1. Attach the solar panel brackets to the back of the solar panel via bolts. Tighten with wrench.

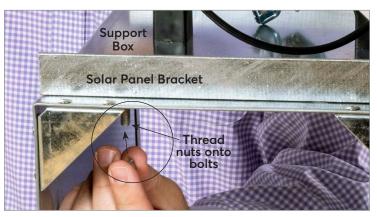

2. The support box is pre-drilled for the solar panel brackets. Insert the brackets into the top of the case and thread nuts onto bolts.

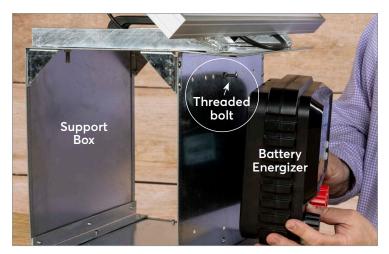

3. Hang the battery energizer on the threaded bolt at the front of the support box. Tighten bolt to tension energizer against support box.

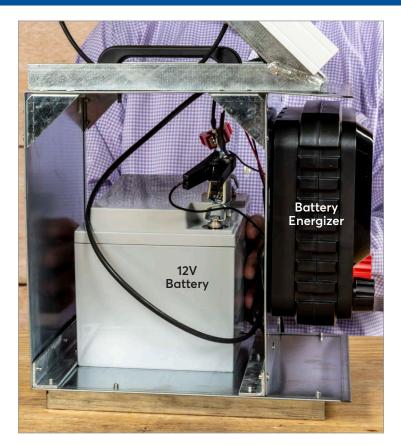

4. Set the battery inside the support box. Attach the solar panel leads to the battery terminals, "+" to "+" and "-" to "-". Connect the energizer's battery adapter to the panel clamps, red to positive and black to negative.



5. Check the front panel to see if the energizer has power, do not touch the terminals. Disconnect power until you are ready to fence. When the fence is ready to be energized: Connect the energizer to the fence, ground rod and finally the battery. For maximum sunlight, orient the unit so the panel faces south.