



Electrified Gates

Installing on wood posts

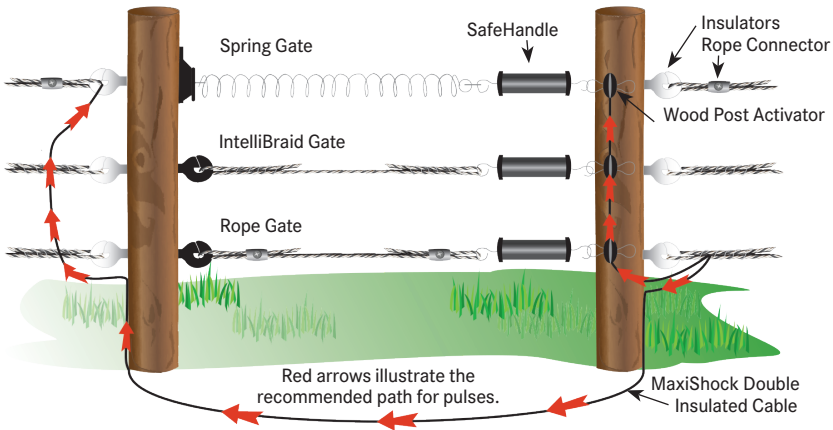

Installing on t posts

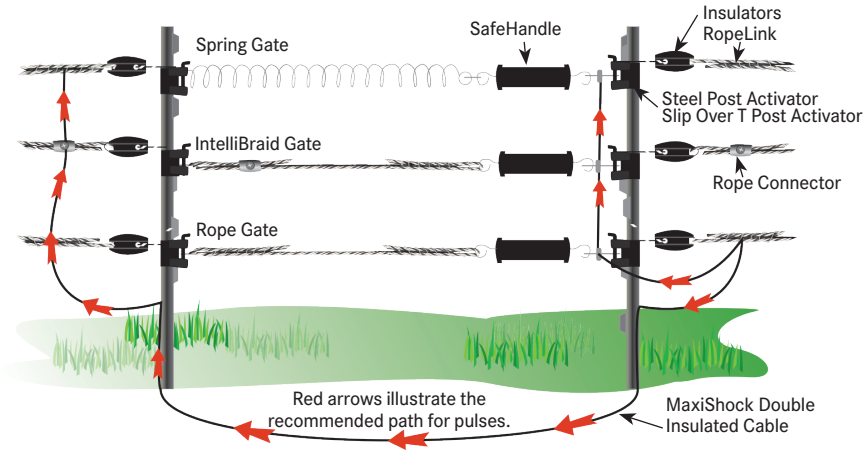

Don't rely on the gate to carry the power to the next fence. Instead, run insulated wire under gate openings to electrically connect fences on each side.

- For permanent fences use PI34 double-insulated wire buried carefully.
- For temporary fences, lay MaxiShock insulated cable just under the soil surface.



www.premier1supplies.com
800-282-6631

© Copyright 2017, Premier1Supplies. All rights reserved.