


# Turkey Crate #540170




[www.premier1supplies.com](http://www.premier1supplies.com)  
800-282-6631

© Copyright 2019, Premier1Supplies.  
All rights reserved.

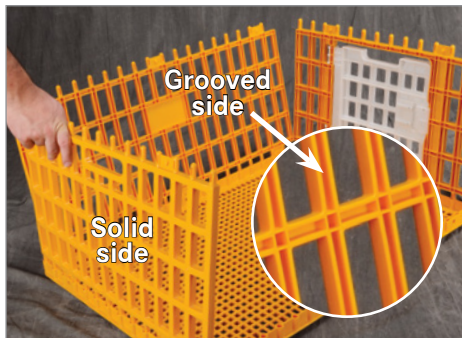

1. Insert panels (*grooves must face inward*) into base. Match curve panels to curve of base.

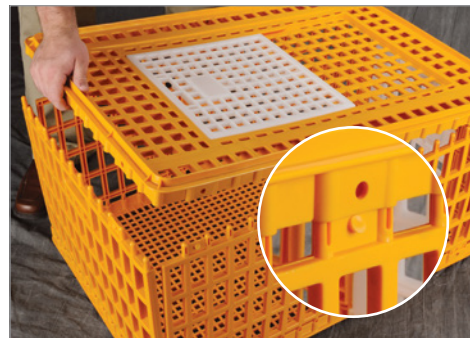

2. Place top panel over side panels. Lining up pegs with holes (*see inset above*).



3. Press panels together (*use a mallet if needed*). You should hear a "snap" when connected.



4. Make sure pegs and holes are connected.